



Instructions for installation of Option 3 into the CG635

Tools needed:

Phillips head screw driver

Replacement Instructions.

- 1 Remove the top cover
2. Remove the 2 screws on the chassis securing the option 2 oscillator.
3. Remove the option 2 oscillator (with one hand on each side, pull clock assembly from the connector, it's easier if you rock it back and forth).
4. Install the option 3 oscillator (make sure the connector pins line up).
5. Install the 2 screws securing the oscillator to the chassis.
6. With White Out fill in the rear panel dot for option 2.
7. With a black felt pin fill in the option 3 dot.
8. Turn the unit on. The EXT clock LED should stay lit.
9. Push "SHIFT" the "7" and then the down arrow. The front panel should display "Rb Unstable"
10. Wait 10 minutes. The front panel display should display "Rb stable"
11. Put the top cover back on.